


Diver-DCX interface for Diver

- Diver-DCX* The SDI-12 interface is powered by the SDI-12 bus, which means it does not require a battery as a power source.
- The interface can be connected directly to a DDC cable.
- The depicted setup illustrates how the
- Diver-DCX SDI-12 Interface can be installed by opening the waterproof box.

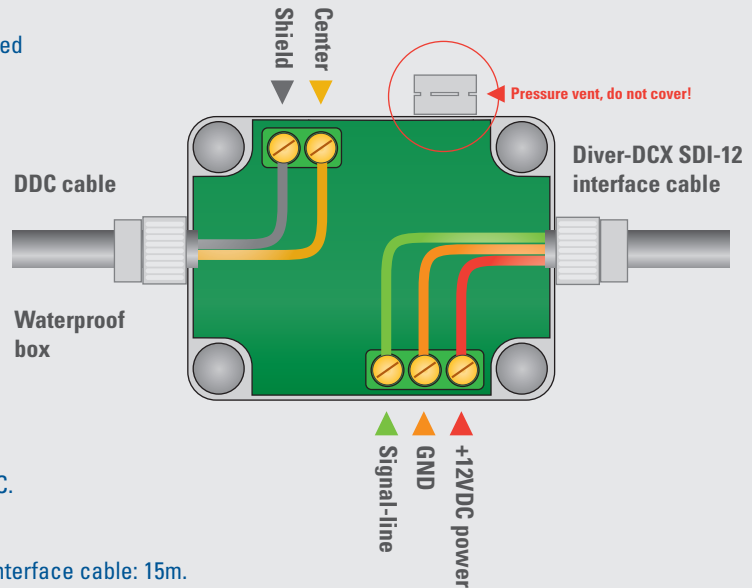

The wire colors are just as reference

Operational temperature: -20 °C up to +80 °C.

Input voltage +7 VDC up to +15 VDC.

Protection grade of the enclosure: IP66.

Maximum length of the Diver-DCX SDI-12 interface cable: 15m.

Maximum length of the DDC cable: 300m.

©Schlumberger *Mark of Schlumberger